

## Fog lights: removing and installing



 
### Note

Removal and installation are described for the left side.  
Removal and installation on the right side are carried out laterally reversed in the same way.


### Special tools and workshop equipment required

- ♦ Torque spanner set -SAT 8010-


#### SAT 8010



 60...300 Nm



 20...100 Nm




2...25 Nm

L00-10226

- ♦ Lever -U 30800-


#### U-30800

 

W00-2169

#### Removing

- Switch off ignition and all electrical consumers and take out ignition key.
- Unscrew securing bolts -arrow- from the grille of the bumper trim.
- Remove the grille from the bumper moulding using the lever -U 30800-.

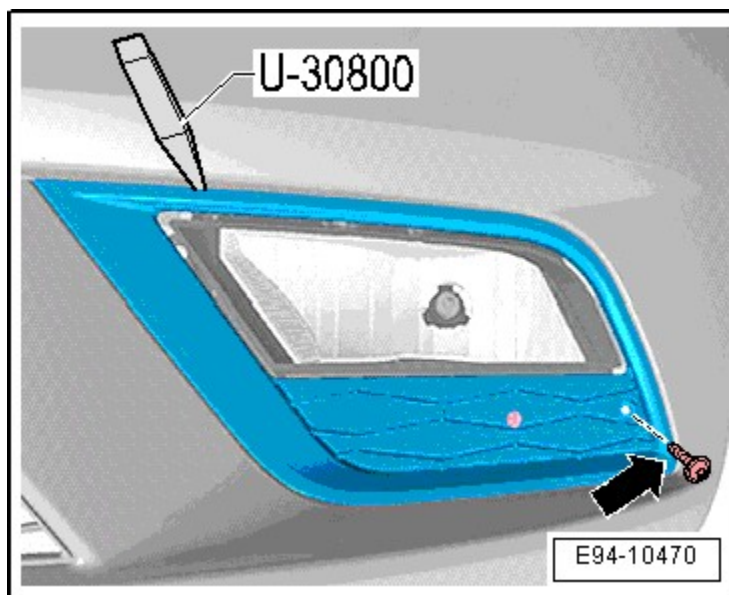


- Unscrew the three securing bolts - arrow- from the fog light bracket on the trim of the bumper.
- Remove fog lamp.
- Separate the fog lamp connector.

#### Fitting

Installation is carried out in the reverse order. During this step, observe the following:

- Check fog light adjustment  
→ **Chapter**.

Specified torques

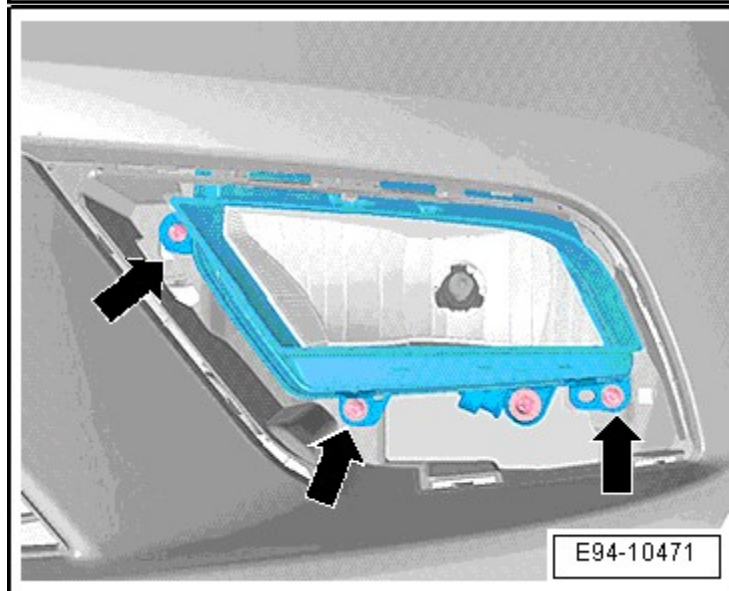

Securing bolts of the grille of the bumper trim	Nm
Securing bolts of the fog lamp on the trim of the bumper	2 Nm $\pm$ 0.5 Nm