


◆ Lever - U30800-

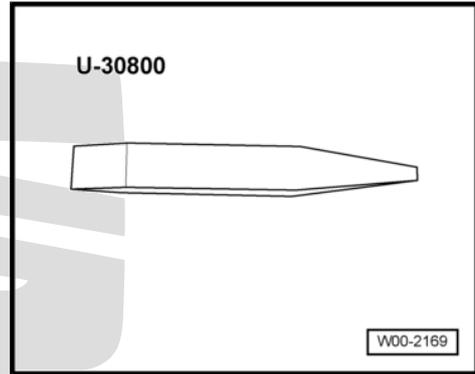

Removing

- Turn off the ignition and all electricity consumers.

Vehicles without access and start authorisation system

- Remove ignition key, if fitted.


Vehicles with access and start authorisation system

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written consent of SEAT S.A. SEAT S.A does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.


- Store the ignition key outside the vehicle to prevent the ignition from being switched on unintentionally.

Continued procedure for all vehicles

- Press the fixing lugs -1- together using the lever - U30800- and remove the luggage compartment light -3-.
- Disconnect electrical connector -2-

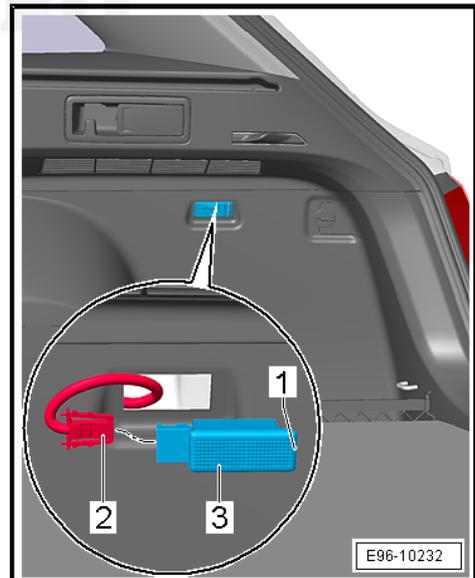


- Release locking lugs -1- and remove heat shield -2- from light lens.

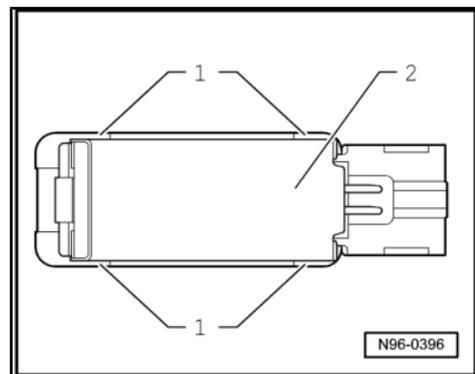

- Remove bulb -1- from bulb holder -2- on reverse side of luggage compartment light.

Installing


Installation is done in reverse order of removal operations.

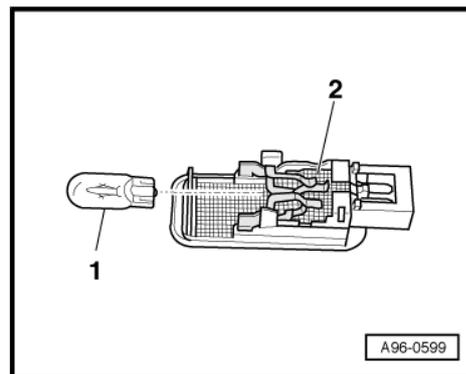

1.12 Removing and installing illuminated make-up mirror W20 / W14

Special tools and workshop equipment required

- ◆ Lever - U30800-

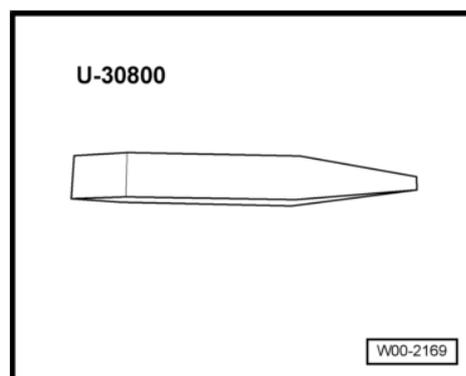

Removing

- Turn off the ignition and all electricity consumers.

Vehicles without access and start authorisation system

- Remove ignition key, if fitted.

Vehicles with access and start authorisation system

- Store the ignition key outside the vehicle to prevent the ignition from being switched on unintentionally.

Continued procedure for all vehicles

- Swivel sun visor forwards.
- Carefully pry out the light -1- of the make-up mirror using a lever - U30800- applied in the recess -arrow-.
- Detach electrical connector.

