

Control unit	FROM					TO			
	Diagnosis address	Original SW code	HW version	SW version	New SW code	New SW version	Symptoms	FLASH WITH	AM
OCUHIGH	0075	5WA 035 284 A	H12	0067	5WA 035 284 C	0142	Required for the stability of online services, other software combinations not guaranteed/tested by the platform Important E-Call changes implemented Enable ORU in MIB3 OI E-Call error correction	DoIP	3629
Sound system	0047	5H0 035 456 A	H05 H06	4315 4316 4315 4316	5H0 035 456 A	4319	Annoying noise from speakers		
MIB OI	005F	5FA 035 862 B 5FA 035 862 C	H56	1672	5FA 035 862 H 5FA 035 862 J	1896	Stability and collision system New features: Wireless Android Auto, ORU, PSO includes MIB (ATN) 2000 tickets resolved compared to VRC Automatic Bluetooth connection WLAN Carplay disconnection Black Carplay screen Black RVC image screen Magenta screen after RVC Green RVC bar Upper frame areas not available after reverse DTC beep in Park assist ASW constant beep Stationary heater menu in HMI Reset to factory settings--> Tile menus are not reset All tile menus appear black Navi tile menu remains black (if Navi is not encrypted) The navigation database is not updated sporadically The system restarts	SD-Creator <b>5FA 919 360 S</b>	R896
RVC	006C	5WA 980 556 A 5WA 980 556 B	H15 H17 H18 H20 H21 H15 H17 H18 H20 H21 H26	0193 0254	5WA 980 556 C	0314	Black screens Reduced activation time	CAN	3629
GATEWAY	0019	5WA 907 530 C 5WA 907 530 E 5WA 907 530 J	752	7070 7078 7072 7075 7082	5WA 907 530 N	7087	Required for the stability of online services, other software combinations not guaranteed/tested by the platform		

				7083				
				7084				
BCM	0009	5WA 937 086 P	016	0133	5WA 937 086 E	0159	Required for the stability of online services, other software combinations not guaranteed/tested by the platform	
		5WA 937 086 Q		0134 0136	5WA 937 086 F			
		5WA 937 086 R		0137	5WA 937 086 G			
AIRBAG	0015	1EA 959 655 AA	009	0164	1EA 959 655 CH	0166	<p>The airbag unit locks  Various DTCs/qualified internal errors (0xFF1B01, 0xEA6400, 0xFF0807...)  ECU defective after deleting error buffer on undervoltage  Airbag warning lamp. Light on without DTC  AWL on without DTC  After a collision there is no entry in the fault memory, the collision is not detected and it is not activated  FSP warning lamp without ON/OFF switch</p>	3629
		1EA 959 655 AC			1EA 959 655 CK			
		1EA 959 655 BH		0037	1EA 959 655 CG			
		1EA 959 655 BJ			1EA 959 655 CH			
		1EA 959 655 BL		0036	1EA 959 655 CK			
		1EA 959 655 BB			1EA 959 655 CG			
		1EA 959 655 BC			1EA 959 655 CH			
		1EA 959 655 BE			1EA 959 655 CK			